 


 
 



 
 
 



 



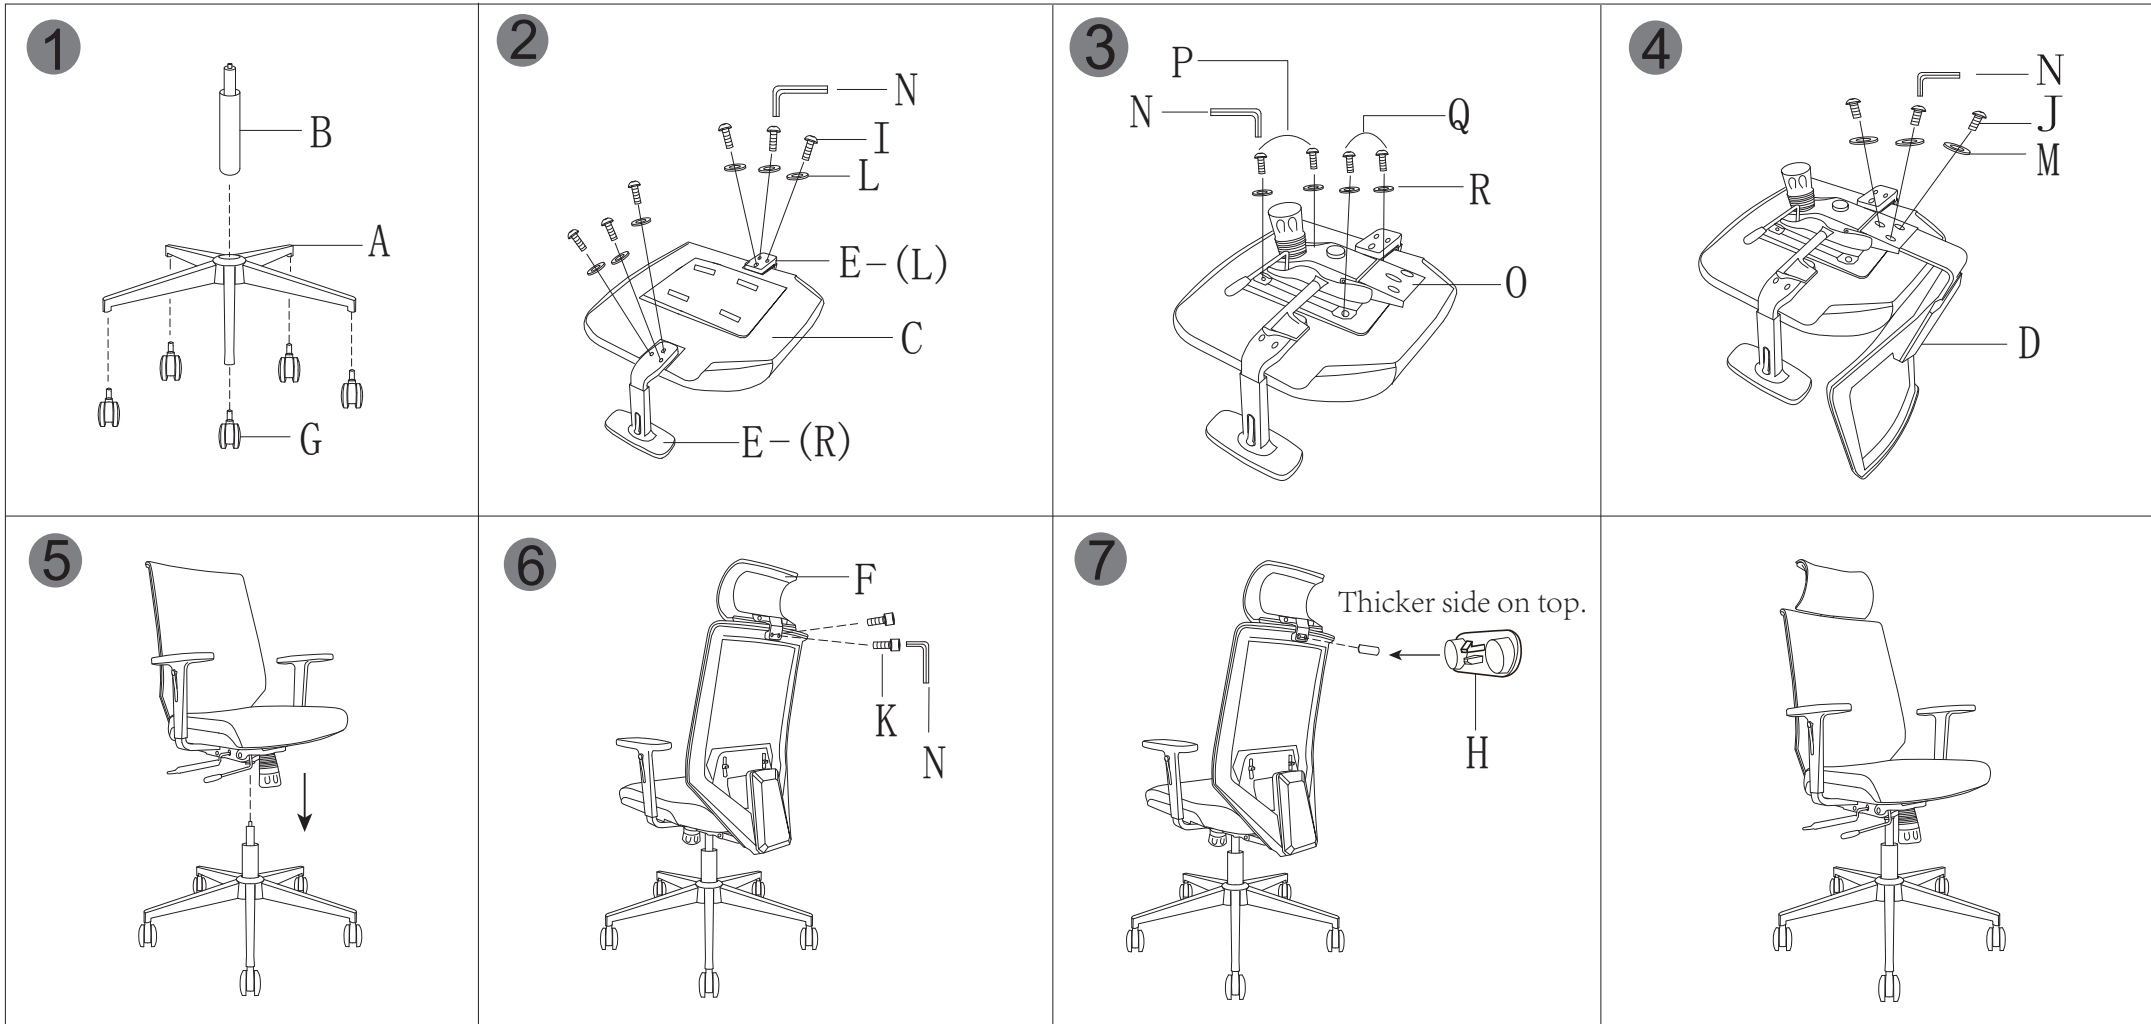


Assembling Instruction


Ax1 	Bx1 	Cx1 	Dx1 	E(R,L)x1 	Fx1 	Gx5 	Hx1 	Ix6  6x40mm
Jx3  8X16mm	Kx2  6X20mm	Lx6  6x13mm	Mx3  8X20mm	Nx1  5mm	Ox1 	Px2  6x35mm	Qx2  6x30mm	Rx4  6x16mm




The angle of headrest is adjustable.




Press the armrest button, the armrest can be adjusted up and down.

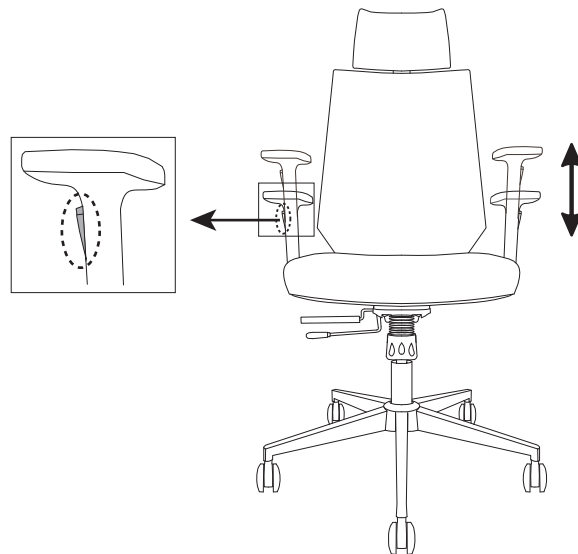


Lift the handle to adjust chair height.

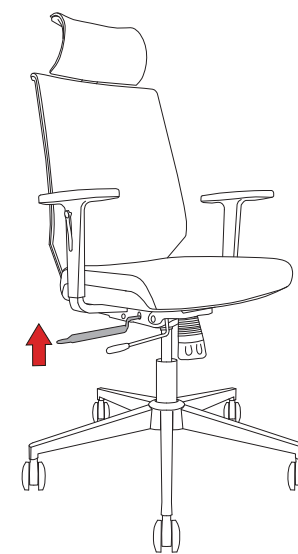


The chair back can be 5 positions up and down adjusted. Reset by reaching the top.

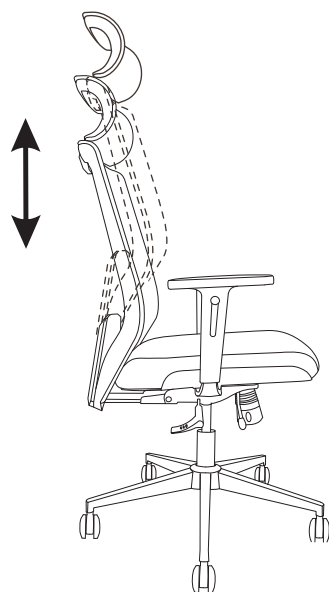


Pull out the handle to enable tilting, push in to lock. A total of 4 positions locking. Pull out handle, lean back slightly and then reset.

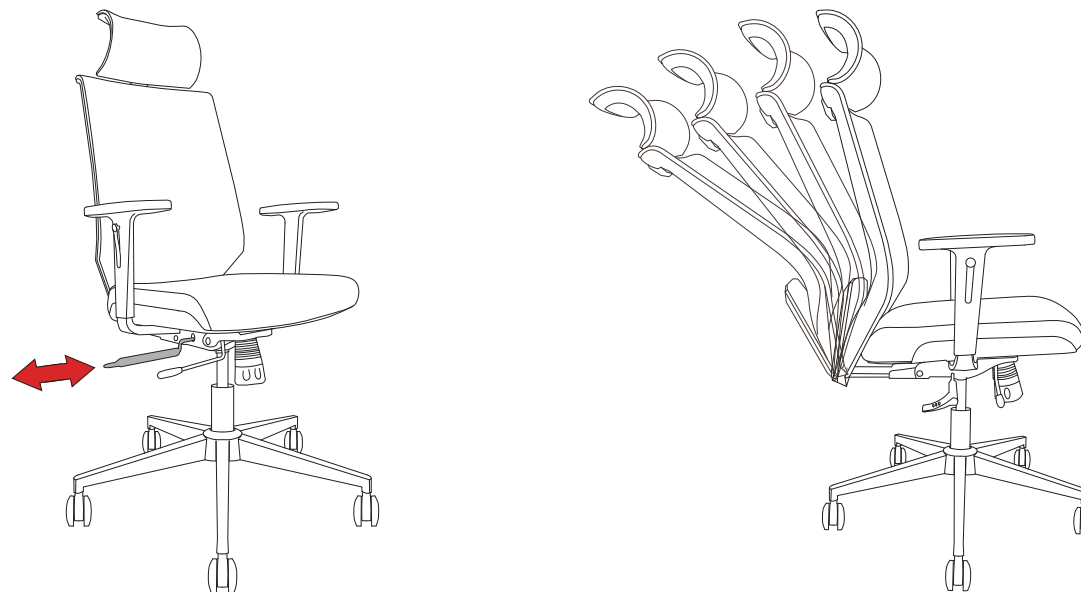

Rotate the knob to increase or reduce the tightness of chair back reclining.

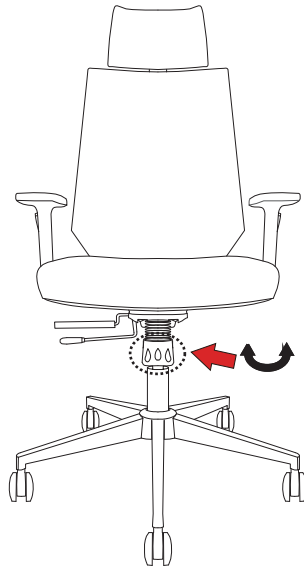

The height of lumbar support can be adjustable.

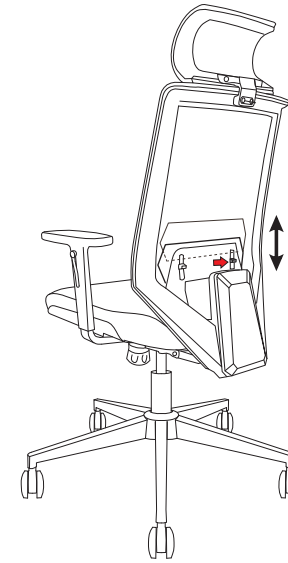

Lift the handle, the seat cushion can be adjusted forward and backward.

