 

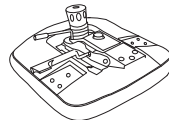





 
 



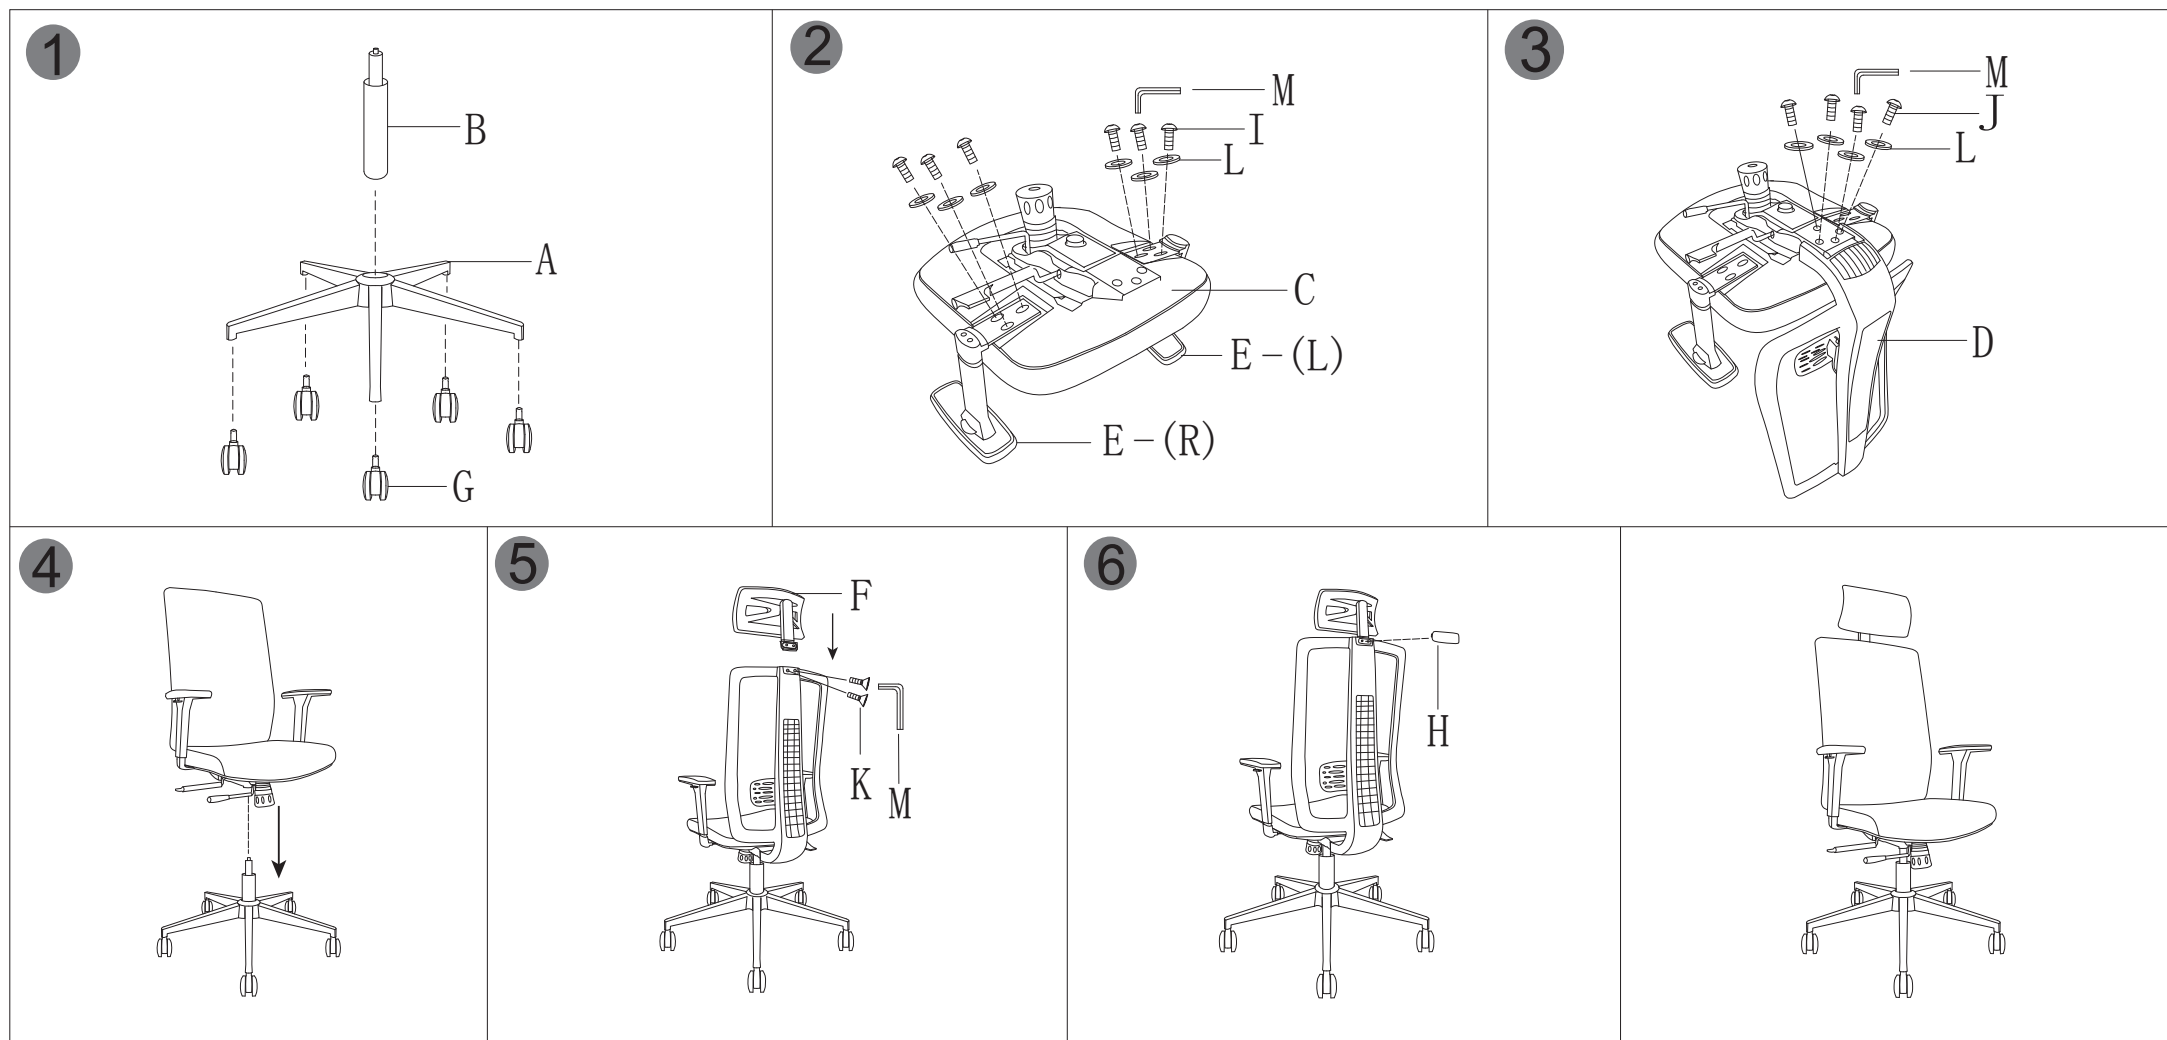


Assembling Instruction


Ax1 	Bx1 	Cx1 	Dx1 	E(R,L)x1 	Fx1 	Gx5 	Hx1 
Ix6  6X25mm	Jx4  6X30mm	Kx2  6X20mm	Lx10  6X16mm	Mx1  5mm			




The angle and height of headrest is adjustable.




Lift the handle to adjust chair height.

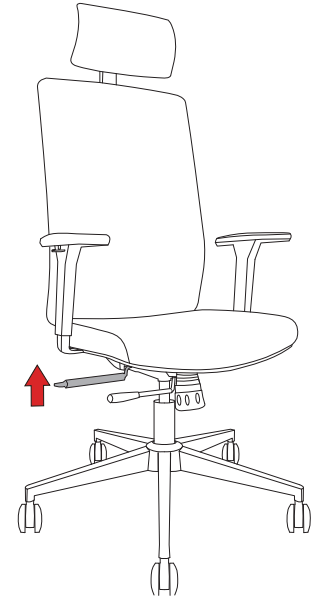


Lift the armrest button, the armrest can be adjusted up and down.

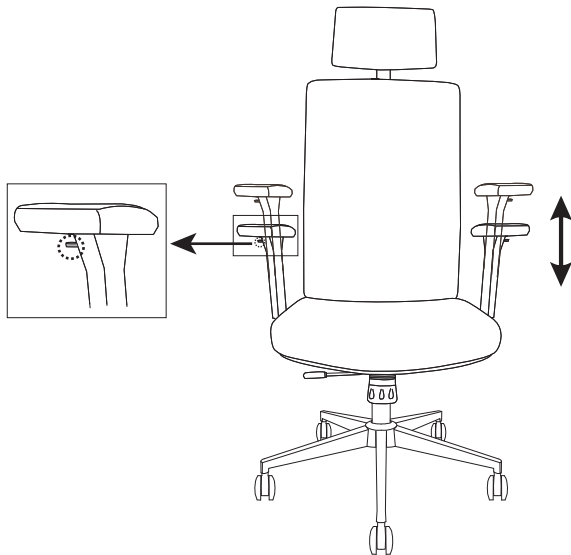


The PU arm pad can be moved forward and backward.

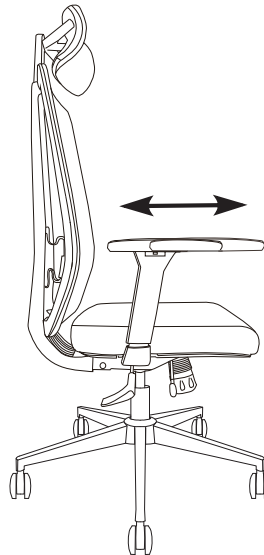


Rotate the PU arm pad to adjust the angle.

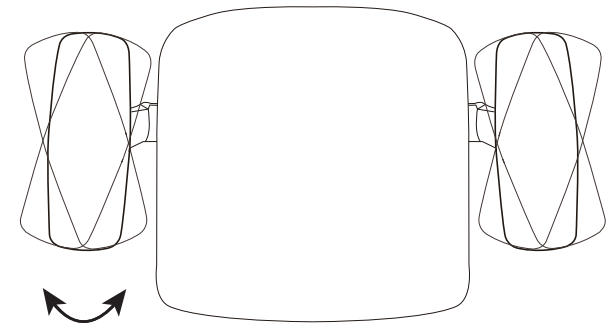


Pull out the handle to enable tilting, push in to lock. A total of 4 positions locking. Pull out handle, lean back slightly and then reset.

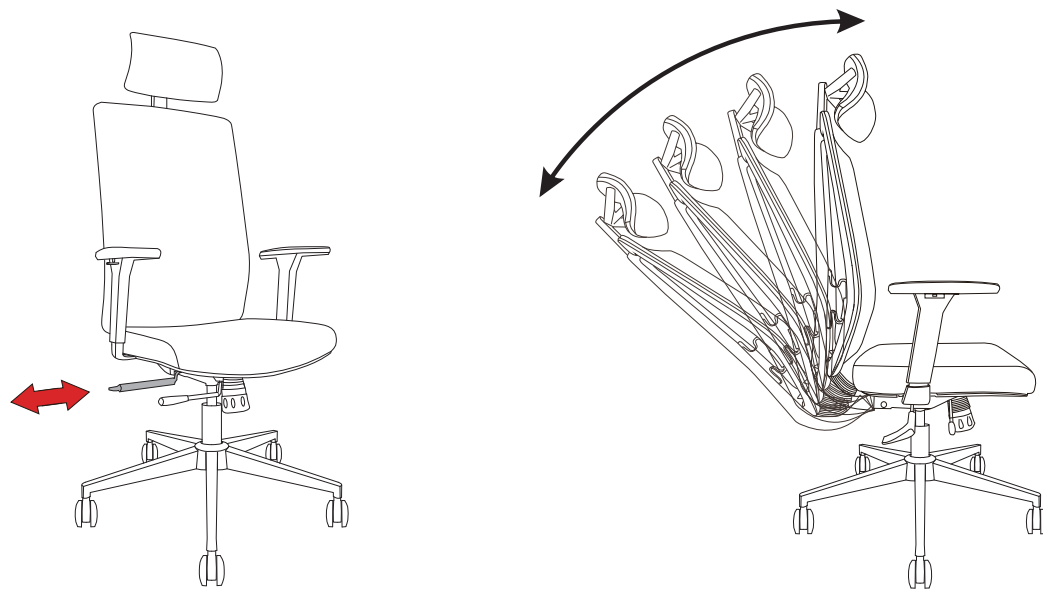

Rotate the knob to increase or reduce the tightness of chair back reclining.

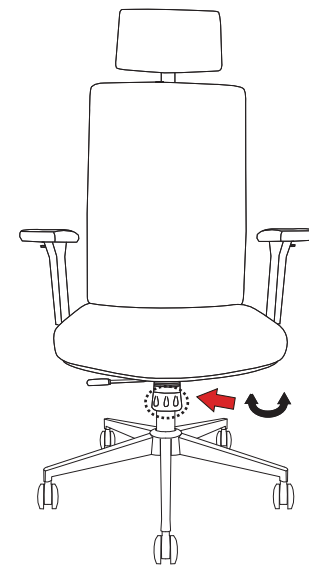

Lift the handle, the seat cushion can be adjusted forward and backward.

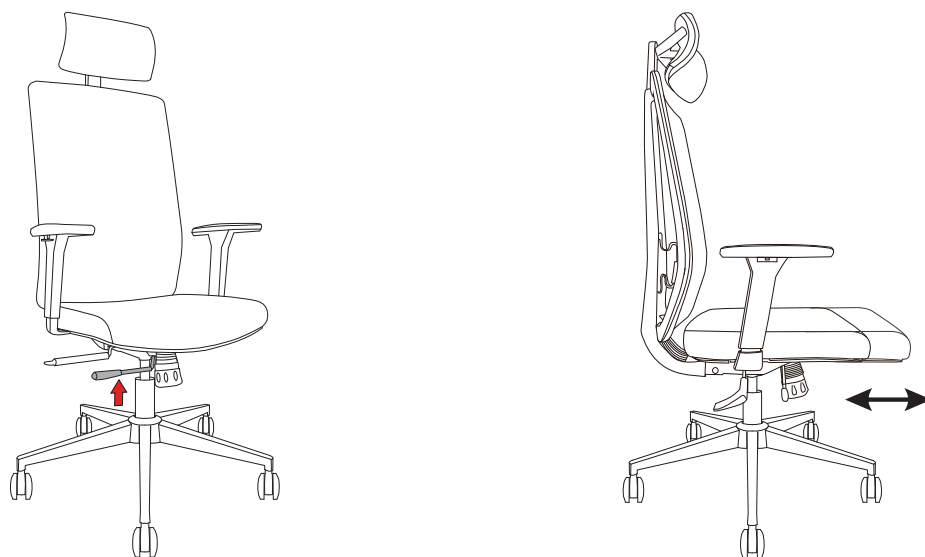

The height of lumbar support can be adjustable.

