 

 




 

 
 











Assembling Instruction


Ax1 	Bx1 	Cx1 	Dx1 	E(R,L)x1 	Fx1 	Gx5 	Hx1 	Ix4  6X40mm
Jx2  6X50mm	Kx3  8X35mm	Lx2  4X12mm	Mx6  6X16mm	Nx3  8X20mm	Ox1  5mm	Px1  6mm	Qx1 	




The angle and height of headrest is adjustable.

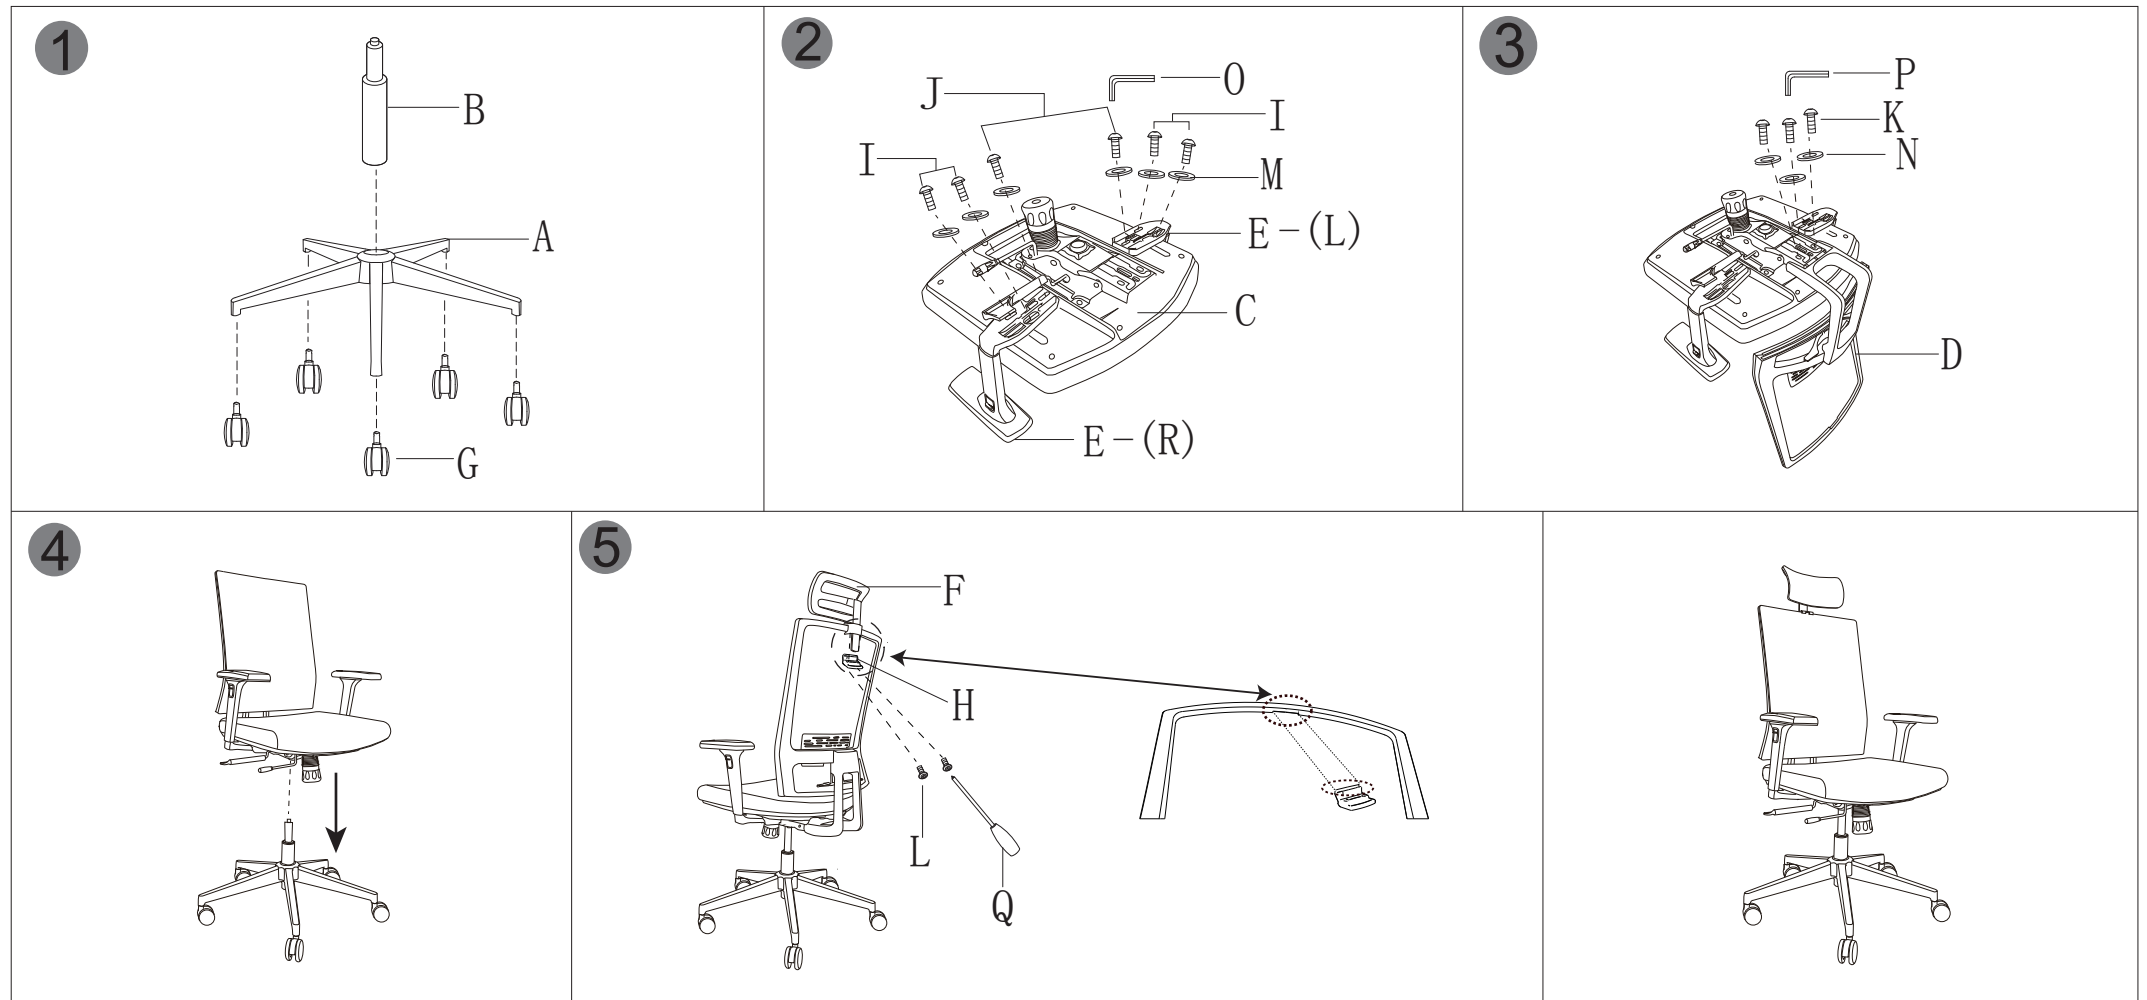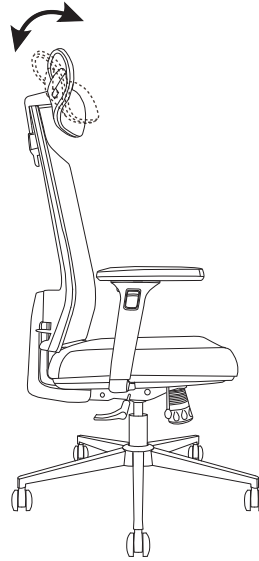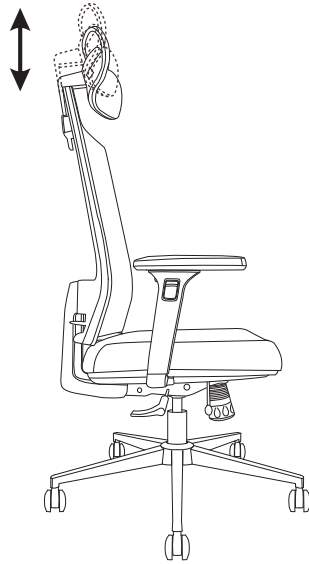


Lift the handle to adjust chair height.

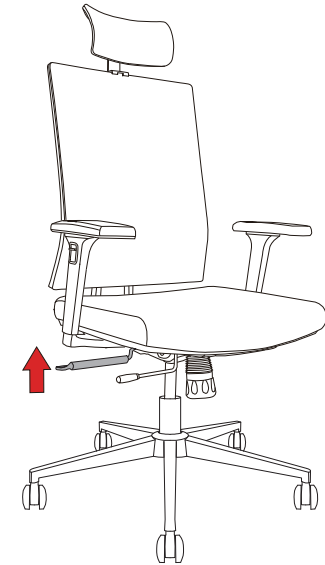


Lift the armrest button, the armrest can be adjusted up and down.

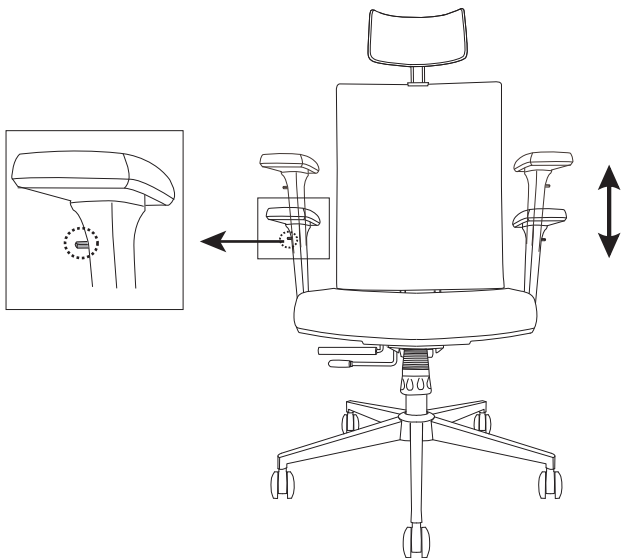


The PU arm pad can be moved forward and backward.

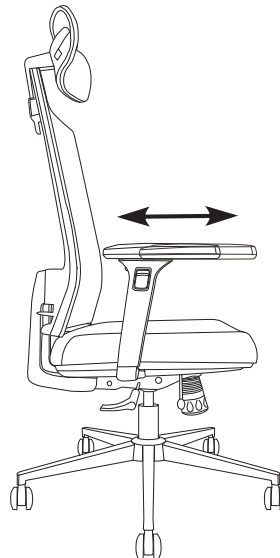


Rotate the PU arm pad to adjust the angle.

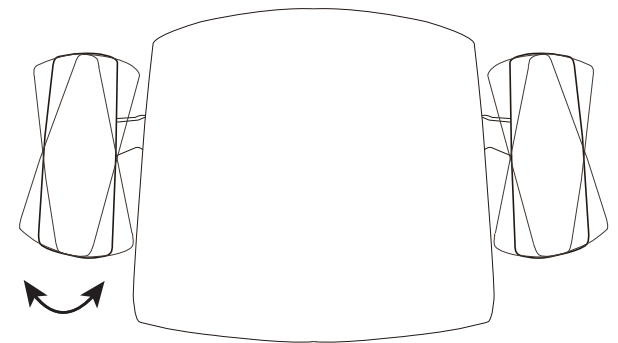

Pull out the handle to enable tilting, push in to lock. A total of 4 positions locking. Pull out handle, lean back slightly and then reset.

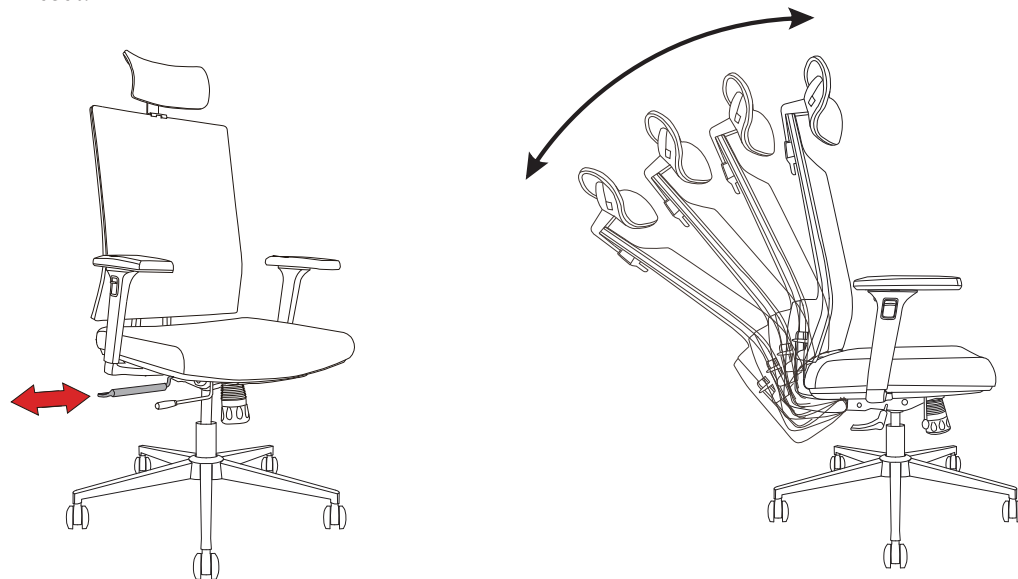

Rotate the knob to increase or reduce the tightness of chair back reclining.

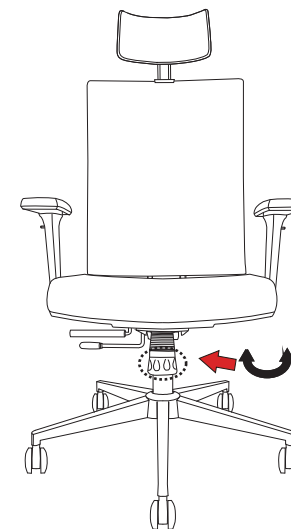

Lift the handle, the seat cushion can be adjusted forward and backward.



The height of lumbar support can be adjustable.

