








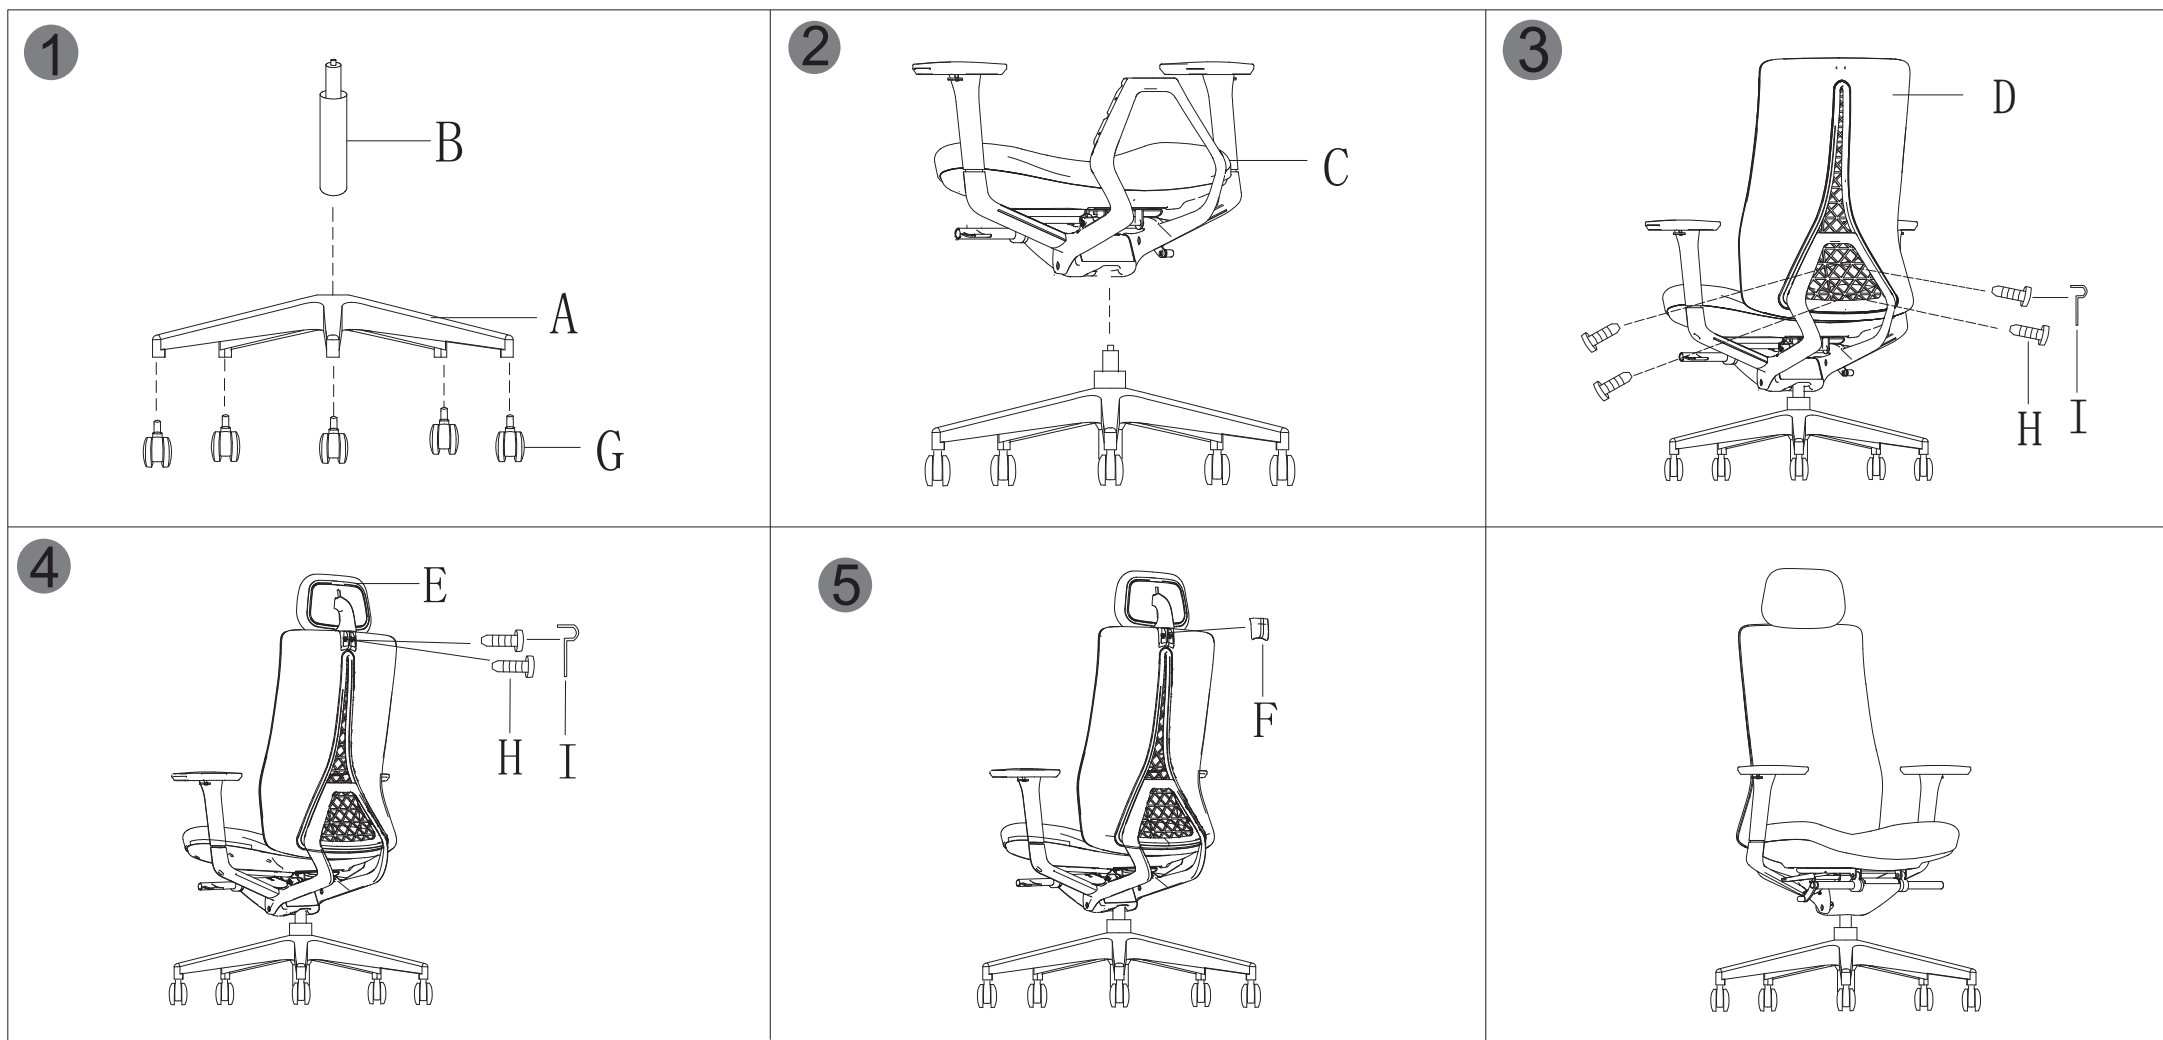
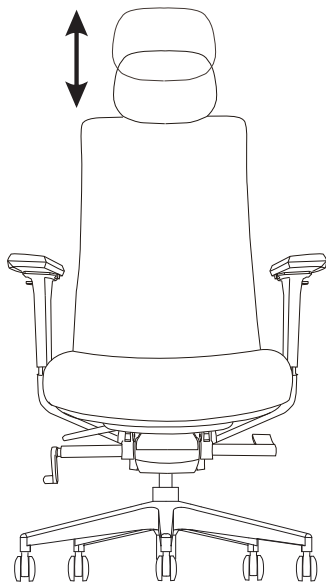


Assembling Instruction


Ax1 	Bx1 	Cx1 	Dx1 	Ex1 	Fx1 	Gx5 	Hx8  6X20mm
Ix1  5mm							




The height of headrest is adjustable.




Lift the armrest button, the armrest can be adjusted up and down.

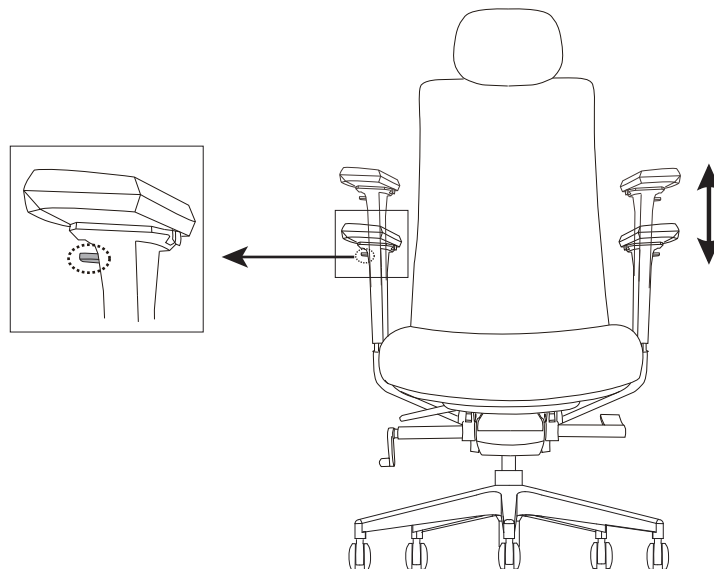


Rotate the PU arm pad to adjust the angle.

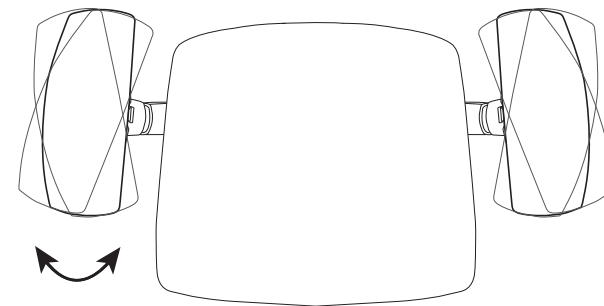


The PU arm pad can be moved forward and backward.

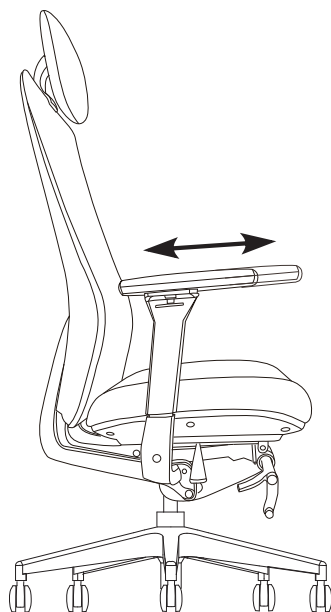


Press the inner buttons to adjust the space between armrests.

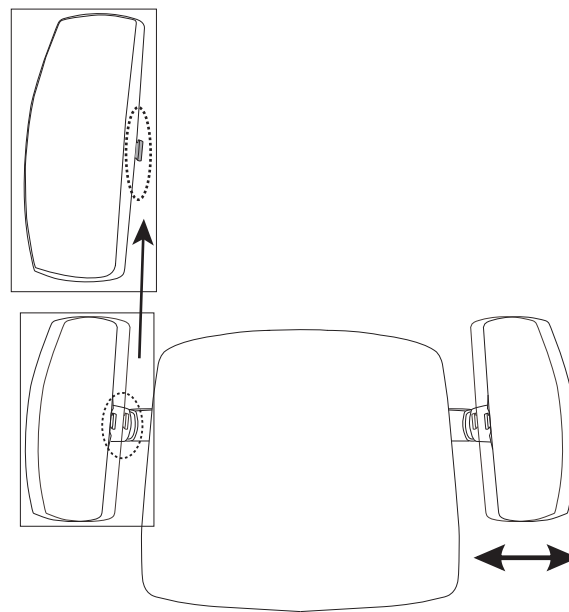

Lift the handle to adjust chair height.

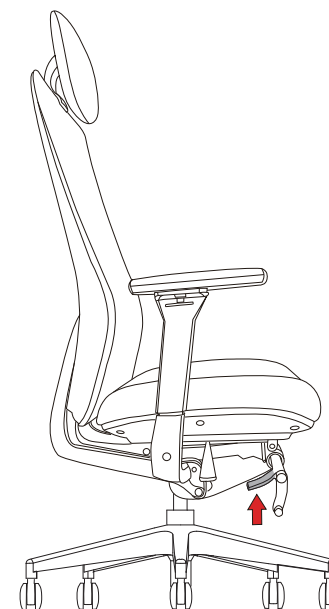

Lift the handle to enable tilting, press down to lock. A total of 9 positions locking. Lift the handle, lean back slightly and then reset.

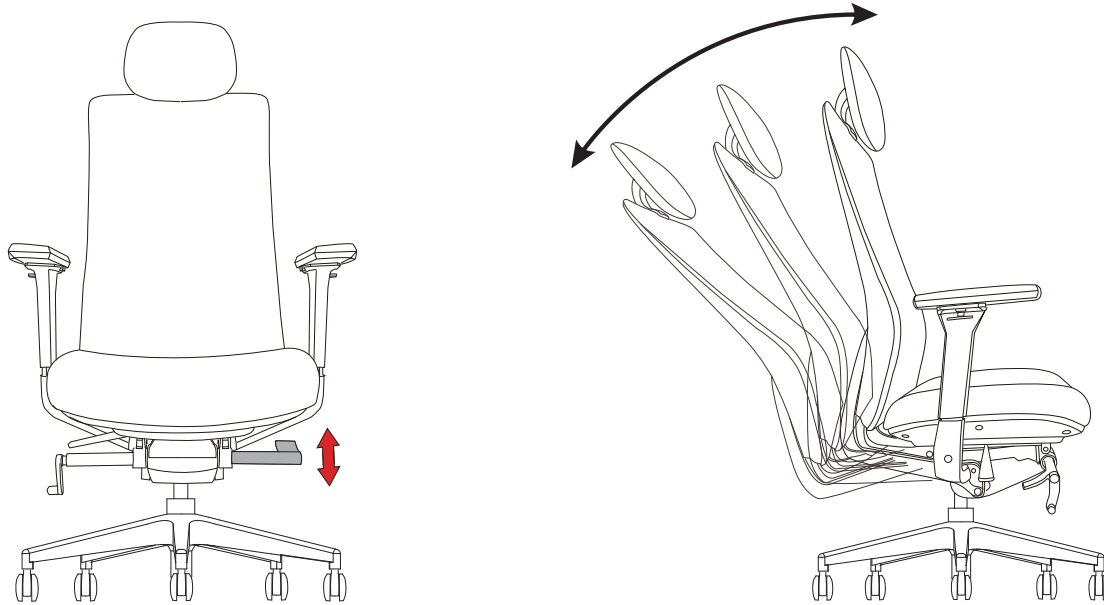

Pull out the handle and rotate to increase or reduce the tightness of chair back reclining



Lift up the handle, the seat cushion can be adjusted forward and backward.

