


INSTRUCTION MANUAL

Sinoartizan

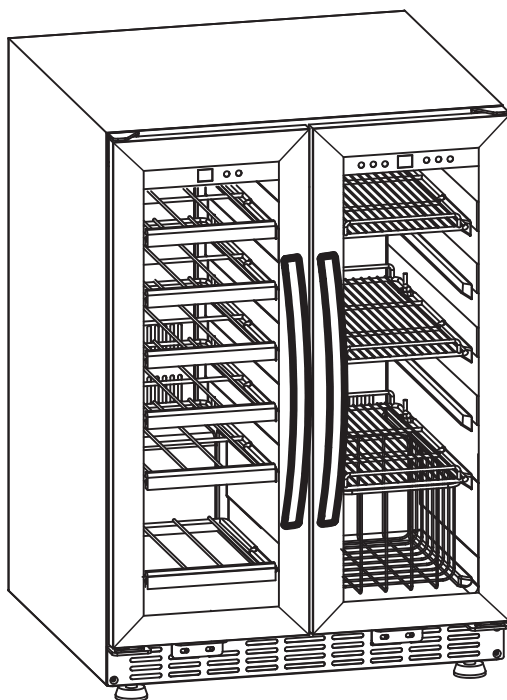

MODEL:

ST-33BC / ST-33S / ST-33D / ST-36B / ST-36D

ST-54BC / ST-54D / ST-54S / ST-66B / ST-66D / ST-168D

Dear Users :

Thanks for choosing our wine coolers. You will enjoy our kind, prompt and considerate service after you buy our products. This manual would apply to various models of our wine coolers. The model you choose may have a little difference from the description in this manual, but please don't worry about, it will still useful for you. In order to make it easy for your using, please read this manual carefully and do as the manual guidance. You will be satisfied with it. In addition, we sincerely hope that you will enjoy using our wine coolers.

Catalogue

Notes -----	1
Structure of Wine Coolers-----	3
Installation -----	8
Operation Instruction -----	9
Care and Maintenance -----	17
Troubleshooting -----	19
Date Parameters -----	21

1. Important Safety Notes:

⚡Warnings⚡	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
<ul style="list-style-type: none">● Read all instructions before using the wine cooler.● Do keep the children away from the wine cooler. Never allow children to operate, play with, or crawl inside the appliance.● Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.● While wine cooler stops working, please call our after-sell service department or other related technicians to check and repair. Never do it by yourself in case of accident.● Once the power cord is damaged, find a professional technician or electrician to change a new one. Never do it by yourself or continue to use so as to avoid danger.● Do make sure that the plug is pulled while cleaning, moving or repairing.● Keep ventilation openings, in the appliance enclosure clear of obstruction.● Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.● Do not damage the refrigerant circuit.● Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer. <p>-Save these instructions-</p>	

⚡Notes⚡


- In order to avoid damage of door seal, please make sure the door totally opened while pulling out the movable shelves.
- Place the cooler closed to power socket.
- Once the cooler is stored with wines, please do not move it again.
- Make sure the cooler placed in proper place in order to avoid that the compressor in the

back could be easily touched.

- Do not start the wine cooler too frequently. The interval should be at least 5 minutes.
- Before you throw away your old wine cooler: Take off the door. Leave the shelves in original place so that children may not easily climb inside.
- If the wine cooler with R600a, Flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explosion.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved .
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Please keep this Use Manual carefully, if you lost the Use Manual, please go to website: www.sinoartizan.com and download it accordingly.
- The instructions shall include the substance of the following: This appliance is intended to be used in household and similar applications such as .
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- Parameters and appearance of the product may be different from the manual, does not affect the normal use of the product.


2. Structure of Wine Coolers

1.ST-33S/ST-54S series structure diagram:

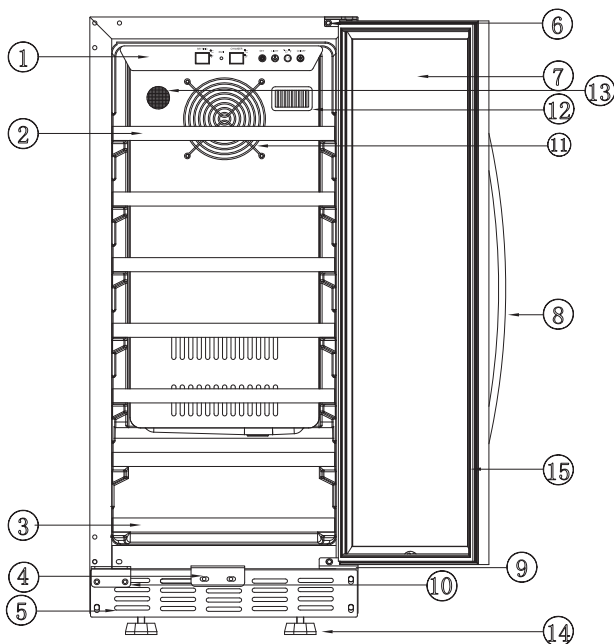


- (1) Control panel (2) Full wooden shelf (3) Small wooden shelf
(4) Lock hook (5) The front vent (6) Upper hinge
(7) Glass door (8) Door handle (9) Lower hinge
(10) Prevent fall device of the door (11) The fan of evaporator
(12) Sensor (13) Carbon fliter (14) Adjustable feet
(15) Door gasket

2.ST-33D/ST-54D/ST-168D series structure diagram:

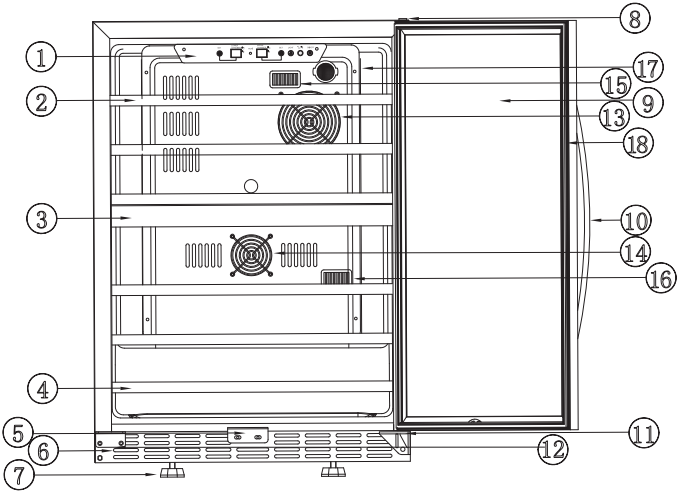


- (1) Control panel (2) Full wooden shelf (3) Compartment divider
(4) Small wooden shelf (5) Lock hook (6) The front vent
(7) Adjustable feet (8) Upper hinge (9) Glass door
(10) Door handle (11) Lower hinge (12) Prevent fall device of the door
(13) The fan of evaporator (14) Heating fan (15) The upper sensor
(16) The lower sensor (17) Carbon fliter (18) Door gasket

4.ST-33BC/ST-54BC series structure diagram:

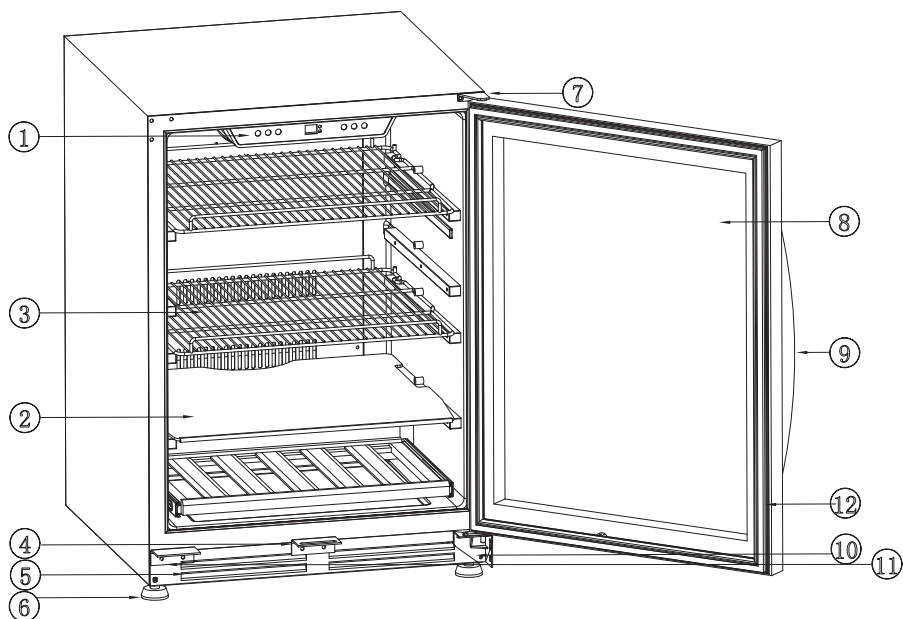


- (1) Control panel (2) Glass shelf (3) Wire basket
(4) Lock hook (5) The front vent (6) Feet (7) Upper hinge
(8) Glass door (9) Handle (10) Lower hinge
(11) Prevent fall device of the door (12) Door gasket

5.ST-36B/ST-66B series structure diagram:

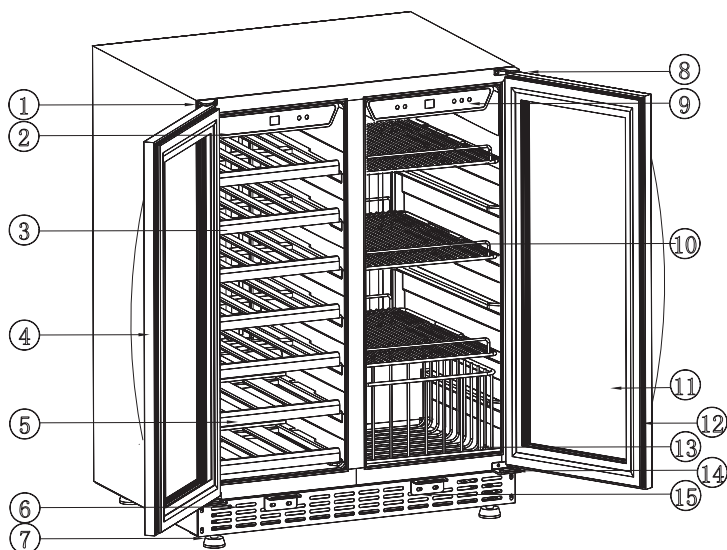

- (1) Left upper hinge (2) Left control panel (3) Wooden shelf
(4) Left glass door (5) Small wooden shelf (6) The front vent
(7) Left lower hinge (8) Right upper hinge (9) Right control panel
(10) Wire shelf (11) Right glass door (12) Gasket (13) Wire basket
(14) Right lower hinge (15) Lock hook

5.ST-36D/ST-66D series structure diagram:

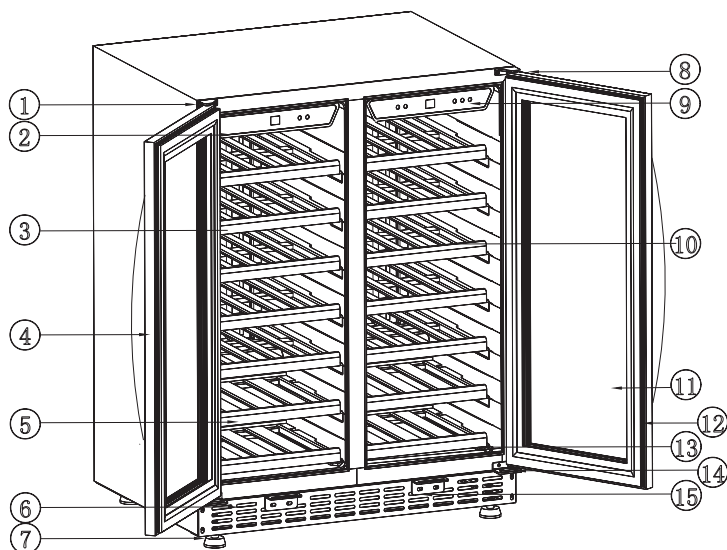

- (1) Left upper hinge (2) Left control panel (3) Wooden shelf
(4) Left glass door (5) Small wooden shelf (6) The front vent
(7) Left lower hinge (8) Right upper hinge (9) Right control panel
(10) Wire shelf (11) Right glass door (12) Gasket (13) Wire basket
(14) Right lower hinge (15) Lock hook

3.Installation

➤ **Before Using Your Wine Cooler / Beverage Cooler**

 
- Remove the exterior and interior packing.
- Before connecting the wine cooler / beverage cooler to the power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water with a soft cloth.
- The cooler is specially designed for wine storage, please do not put in other goods.

➤ **Installation:**

- The cooler should be placed independently so as to make sure good heat dissipation. The back of the cooler should be away from the wall 10cm at minimum.
- Place your wine cooler / beverage cooler on a floor that is strong enough to support it when it is fully loaded. To level your wine cooler, adjust the front leveling leg at the bottom of the wine cooler.
- Locate the wine cooler / beverage cooler away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug in the proper power socket. Make sure that the shape and voltage of the socket is consistent with the nameplate on the back of the cooler.

4. Operation Instruction

4.1 Control Panel Below(ST-33S/ST-33BC/ST-54BC/ST-54S):



○ Display Windows

- **RUN light**: Indicator light of compressor working. While the compressor operating, the red light is on. While it stops operating, the red light is off.
- **SETTING**: Display of the temperature you set. The range of temperature setting is 0°C~37°C or 32°F~99°F.
- **CHAMBER**: Display of the actual temperature inside the cabinet; The range is 0°C~37°C or 32°F~99°F.
- **°C/°F light**: When the °C light is on, it indicates Celsius temperature; When the °F light is on, it indicates Fahrenheit temperature.

○ Button Operation

- **SET Button**: Temperature setting button; Once you press the button, the temperature increase 1°C or 1°F. Setting range detail as below:

ST-33S/ST-54S: 5°C~18°C or 41°F~64°F

 
ST-33BC: 3°C~18°C or 37°F~64°F

ST-54BC: 3°C~18°C or 37°F~64°F

- **LIGHT Button**: Cabinet light control button; Note: Once the light is turned on, it will automatically off after 10 minutes all out of protecting the wines inside.
- **°C/°F Button**: Celsius and Fahrenheit conversion button;
- **ON/OFF button**: Power on and off button; Press the button for 3 seconds, it starts; press it 3 seconds again, it stops.

4.2 Control Panel Below

(for dual zone model ST-33D / ST- 54D / ST-168D):





○ Display Windows

- **RUN light**: Indicator light of compressor working. While the compressor operating, the red light is on. While it stops operating, the red light is off.
- **UPPER CHAMBER**: Display of the actual temperature of the upper chamber. The range is 0°C~37°C or 32°F~99°F.
- **LOWER CHAMBER**: Display of the actual temperature of the lower chamber; The range is 0°C~37°C or 32°F~99°F.
- **°C/°F light**: When the °C light is on, it indicates Celsius temperature; When the °F light is on, it indicates Fahrenheit temperature.

○ Button Operation

- **SET Button of the upper chamber**: Temperature setting button; Once you press the button, the temperature increase 1°C or 1°F. Setting range is between 5°C~12°C or 41°F~54°F.
- **SET Button of the lower chamber**: Temperature setting button; Once you press the button, the temperature increase 1°C or 1°F. Setting range is between 12°C~18°C or 54°F~64°F.
- **LIGHT Button**: Cabinet light control button; Note: Once the light is turned on, it will automatically off after 10 minutes all out of protecting the wines inside.
- **°C/°F Button**: Celsius and Fahrenheit conversion button;
- **ON/OFF button**: Power on and off button; Press the button for 3 seconds, it starts; press it 3 seconds again, it stops.

  4.3 Control Panel Below(ST-36B/ST-36D):



○ Display Windows

- **RUN light**: Indicator light of compressor working. While the compressor operating, the red light is on. While it stops operating, the red light is off.
- **CHAMBER**: Display of the setting and actual temperature inside the cabinet; The range is 0°C~37°C or 32°F~99°F.
- **°C/°F light**: When the °C light is on, it indicates Celsius temperature; When the °F light is on, it indicates Fahrenheit temperature.

○ Button Operation

- **“+” “-” Button**: Temperature setting button; Once you press “+” button, the temperature increase 1°C or 1°F; if you want to decrease the temperature, press the “-” button, the temperature decreased 1°C or 1°F each time.


Detail temperature setting range as following:

For **ST-36B** 5°C~18°C or 41°F~64°F for the left zone, 4°C~10°C or 39°F~50°F for the right zone;

For **ST-36D** is between: 5°C~18°C or 41°F~64°F both for the left and right zone.

- **LIGHT Button**: Cabinet light control button; Note: Once the light is turned on, it will automatically off after 10 minutes all out of protecting the wines inside.
- **°C/°F Button**: Celsius and Fahrenheit conversion button;
- **ON/OFF button**: Power on and off button; Press the button for 3 seconds, it starts; press it 3 seconds again, it stops.

4.4 Control Panel Below(ST-66B/ST-66D) :

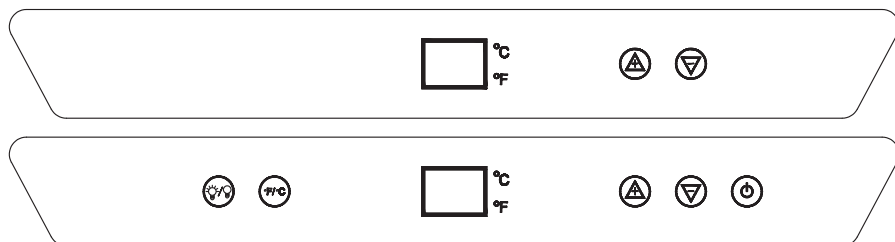

○ Display Windows

- CHAMBER**: Display of the setting and actual temperature inside the cabinet; The range is 0°C~37°C or 32°F~99°F.
- °C/°F light**: When the °C light is on, it indicates Celsius temperature; When the °F light is on, it indicates Fahrenheit temperature.

○ Button Operation

- “+” “-” Button**: Temperature setting button; Once you press “+” button, the temperature increase 1°C or 1°F; if you want to decrease the temperature, press the “-” button, the temperature decreased 1°C or 1°F each time.

Detail temperature setting range as following:


For **ST-66B** is between: 5°C~18°C or 41°F~64°F for the left zone, 4°C~10°C or 39°F~50°F for the right zone.

For **ST-66D** is between: 5°C~18°C or 41°F~64°F both for the left and right zone.

- LIGHT Button**: Cabinet light control button; Note: Once the light is turned on, it will automatically off after 10 minutes all out of protecting the wines inside.
- °C/°F Button**: Celsius and Fahrenheit conversion button;
- ON/OFF button**: Power on and off button; Press the button for 3 seconds, it starts; press it 3 seconds again, it stops.


○ **Shelf Change ST-33S/ST-33D/ST-54D/ST-54S/ST-168D**

Do as the following shows if needing to pull out or change the shelves;

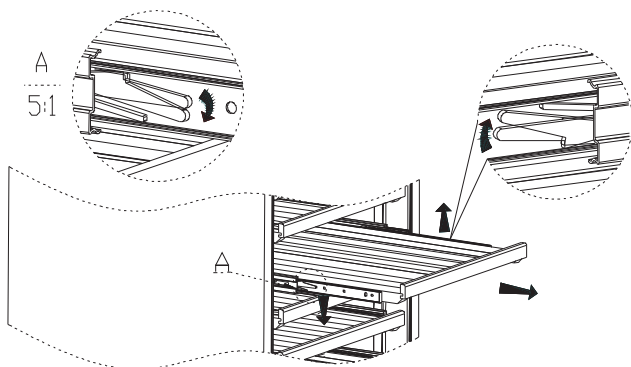


Firstly take out all the wines from the shelves and pull shelf out to the limit. Then press down the left limit of sliding rail and meanwhile press up the right one, pull the shelves out at this time. It could be easily pulled out if doing the three steps (Press down left limit, press up the right one and pulling out) at the same time.

○ **Shelf Change ST-33BC,ST-54BC,ST-36B,ST-66B**



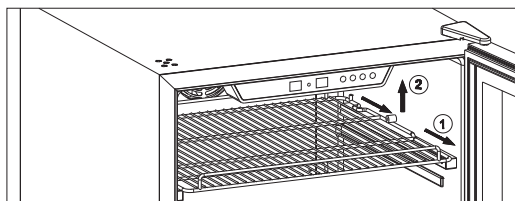


Pull out the wire shelf, make the cove position toward to the pillar at two sides of the cabinet, then lift up and pull out the wire shelf.

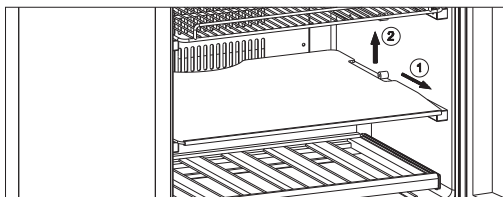

Pull out the glass shelf, make the cove position toward to the pillar at two sides of the cabinet, then lift up and pull out the glass shelf.

 ○ **Placement and storage of wines** Several common layouts of wines:

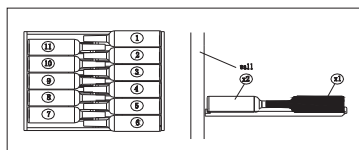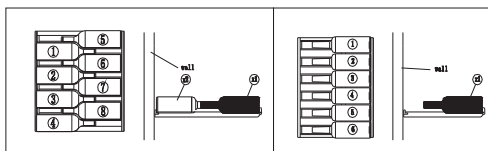

Your cabinet was designed to store a maximum number of bottles in total security.


The wines are kindly advised to layout equally.








The best temperature for red wines is 52-64 °F; For white wines is 43-54 °F;

The temperature range of our wine coolers could set between 41-64 °F.

○ **Reversing the door swing of your appliance (only suitable for model ST-54D,ST-54BC,ST-54BC,ST-168D)**

The unit is delivered to you with the door opening from the left side (hinge on right side). The door of this appliance is capable of opening from either the left or right side. To reverse the door swing of your cooler and open from the right side, please follow the instructions and diagram as follows.

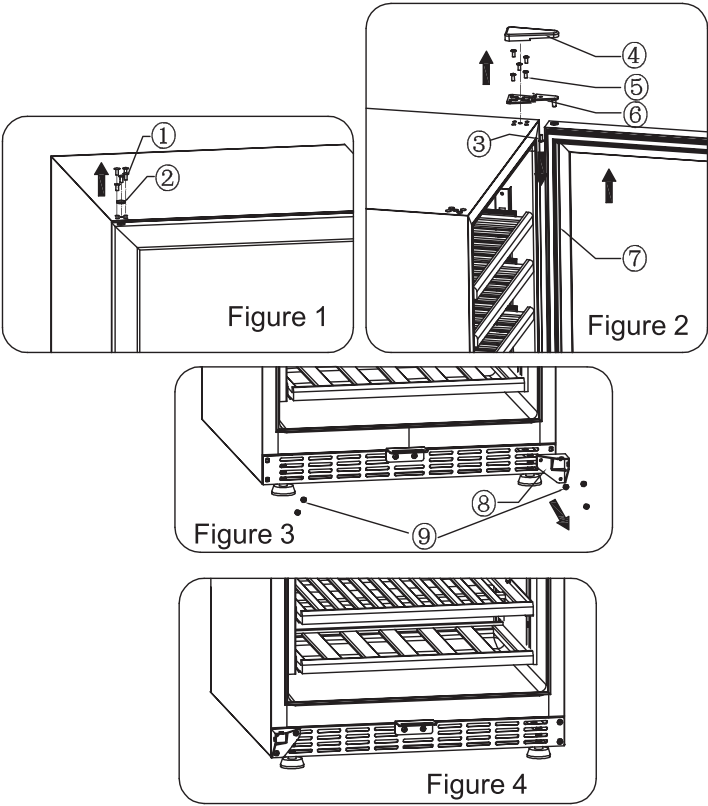

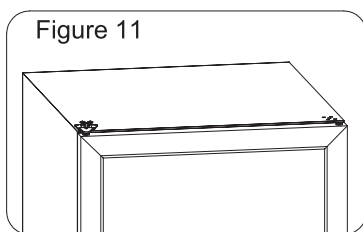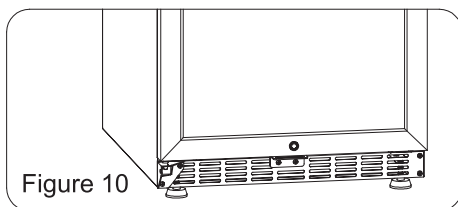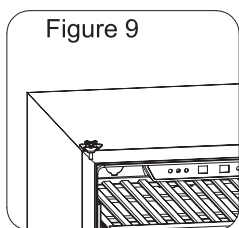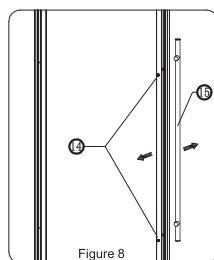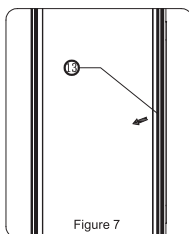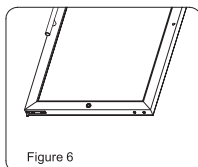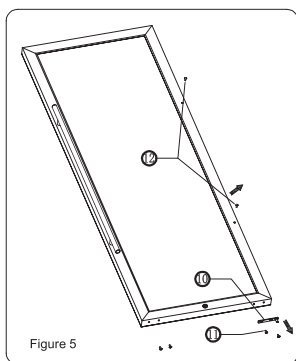

NOTE: All parts removed must be saved to allow the door swing to be reversed

1. Use the sharp tools to pry open the decoration nail on the top of the cabinet and the cap of door spindle carefully. (Fig 1)
2. Open the door to an angle, unscrew the screw of the door hinges cover, remove the cover of the upper door hinge; then unscrew all the screws on the upper door hinge. Be careful to hold the glass door firmly after removing the screw and take off the door. (Fig 2)

3.Remove the screw of lower door hinge and the left side screw of the front vent (Fig 3); and then install the lower door hinge at the designated position on the opposite side.(Fig 4)

4.Remove the screw of door handle, then remove the bottom screw of left side of the door and remove the lower supporter of the door(Fig 5); Install the lower support of the door to the opposite side.(Fig 6)

5.Pull open middle section of the door gasket, then it will come out the handle screw hole(Fig 7); remove the handle and install it on the opposite side.(Fig 8)

6.Install the upper door hinge to the opposite side and tighten the screws. (Fig 9)

7.Set glass door shaft to aim the shaft of lower door hinge (Fig 10);and then aim the upper door hinge (Fig 11); adjust the door and the cabinet is aligned and leveled, then tighten all the lock screws.

You also can call customer service for reversal instructions if it is necessary.

5. Care and Maintenance

Cleaning Your Wine Cooler

- Wash the inside surfaces with warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda with a quart of water.
- Wash the shelves with a mild detergent solution.
- Turn off the power, unplug the appliance, and remove all items including shelves and rack.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

➤ **Power Failure**

- Most power failures are corrected within a few hours and will not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

➤ **Vacancy time**

- **Short vacancy:** Leave the wine cooler stopping working for around three weeks.
- **Long vacancy:** If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly so as to restraint odors and mould. Leave the door open slightly all the time if necessary.

➤ **Moving Your Wine Cooler**

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Make the door shut.
- Be sure the appliance stays secure in the upright position during transportation.

Also protect outside of appliance with a blanket, or similar item.

Energy saving Tips

- The wine cooler should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight

6. Troubleshooting

You can solve many common wine cooler problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the service.

TROUBLESHOOTING GUIDE

(a) PROBLEM	(b) POSSIBLE CAUSE
Wine Cooler does not operate.	Not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
Wine Cooler is not cold enough.	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
Turn on and off frequently.	The room temperature is hotter than normal. A large amount of contents has been added to the wine cooler. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work.	Not plugged in. The circuit breaker tripped or a blown fuse. The bulb has burned out. The light button is "OFF".
Vibrations.	Check to assure that the wine cooler is on level.

<p>The wine cooler seems to make too much noise.</p>	<p>The ratting noise may come from the flow of the refrigerator, which is normal.</p> <p>As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerator in your wine cooler</p> <p>Contraction and expansion of the inside walls may cause popping and crackling noises.</p> <p>The wine cooler is not on level.</p>
<p>The door will not close properly.</p>	<p>The wine cooler is not on level.</p> <p>The door was reversed and not properly installed.</p> <p>The gasket is dirty.</p> <p>The shelves are out of position.</p>

Notes: The replacement of LED light must need the qualified technician. First to unscrew the 2 screws on the light cover, then take out the screw on the LED panel, and replace LED light of same specification.

7. Data Parameters

Model	ST-33S	ST-33BC	ST-54BC	ST-54D
Climate Type	N			
Volume(L)	80	80	154	154
Bottles Capacity	33	76	154	44
Rated current(A)	AC110-120V,60Hz			
	1.3A	1.3A	1.3A	1.3A
Rated power(W)	90W	90W	100W	100W
Sound (db)	42	42	42	42
Net Weight (LBS)	73.9	73.9	105.4	111.3

Model	ST-33D	ST-36B	ST-66B	ST-168D
Climate Type	N			
Volume(L)	80	130	168	450
Bottles Capacity	28	18 bottles for left zone, 55 pop cans for right zone	33 bottles for left zone, 70 pop cans for right zone	159
Rated current(A)	AC110-120V,60Hz			
	1.3A	1.3A	1.3A	1.9A
Rated power(W)	90W	100W	90W	140W
Sound (db)	42	42	42	42
Net Weight (LBS)	79.37	100.3	127.9	220

Model	ST-54S	ST-36D	ST-66D
Climate Type	N		
Volume(L)	154	130	168
Bottles Capacity	51	36	62
Rated current(A)	AC110-120V,60Hz		
	1.3A	1.3A	1.3A
Rated power(W)	100W	100W	90W
Sound (db)	42	42	42
Net Weight (LBS)	108	100.3	127.9

Sinoartizan

E-mail: service@sinoartizan.com

Website: www.sinoartizan.com

Prop. 65 Warning for California Residents



WARNING

Cancer and Reproductive Harm -
www.P65Warnings.ca.gov

